

MT45MR - Wiring Instructions for Receiver:

Receiver replacement for instructions:

Remove the cap of the receiver and disconnect the receiver from both sides (motor cable terminals and the main power terminals)

Re-connect the terminals to the replacement receiver as follows:

Motor Cable Terminals

E: Earth Wire (Green)
N: Neural (White)
L: Hot - Up/Down to Motor (Black)
R: Hot - Down/Up to Motor (Red)

Main Power Terminals

E: Earth Wire (Green)
N: Neutral (White)
L: Hot (Black)

Connect all the wires in the above order and then put the cap back on the receiver. In order to prevent any future water damage to the receiver, put some clear silicone around the wires at the base of the receiver.