

ADJUSTING THE PITCH ON THE AWNING

CAUTION: DO NOT ATTEMPT TO ADJUST THE PITCH IN THE RETRACTED POSITION IF YOU ORDERED AN ADJUSTABLE PITCH CRANK.. DO NOT STOP..GO DIRECTLY TO NEXT STEP

- Extend the awning completely.
- First identify the pitch adjustment brackets (K). (see diagram below)
- Loosen the top bolt (P) and bottom bolt (R) (do not remove them, just allow them to be moved) on the bracket at both ends. This operation requires a 6mm and 8mm Allen wrench.
- Have your helper(s) hold the front end of the awning.
- Turn Allen bolt (Q) counter-clock-wise to lower the pitch and clock-wise to raise the pitch on both ends.
- Once you adjust the pitch to your desired level, tighten up the top bolt (P) and bottom bolt (R).
- If the front bar is lower on one side, simply loosen (P) on the opposite side bracket and make the appropriate adjustment to (Q). After you are happy with the results retighten (P).

K – PITCH ADJUSTMENT BRACKET

