



3600 Bell Dr., B-E
Hurst, TX 76053
Phone 817-354-9600; Fax 817-354-9612
www.awntech.com
Email: customers@awntech.com

Wiring instructions for the Wind Sensor: Please be advised that you follow the right set of wiring instructions.

RIGHT MOTOR (WHEN YOU FACE THE AWNING)

Motor Cable Terminals

- 4: Earth Wire (Green/Yellow)**
- 2: Neural (Blue)**
- 1: Hot - Up/Down to Motor (Brown)**
- 3: Hot - Down/Up to Motor (Black)**

LEFT MOTOR (WHEN YOU FACE THE AWNING)

Motor Cable Terminals

- 4: Earth Wire (Green/Yellow)**
- 2: Neural (Blue)**
- 1: Hot - Up/Down to Motor (Black)**
- 3: Hot - Down/Up to Motor (brown)**

Main Power Terminals

- 5: Earth Wire (Green)**
- 7: Neutral (White)**
- 6: Hot (Black)**